

 


Eryun Paper Shredder

Warning! Please read this user's manual before operating this product to prevent damage to yourself or your property.

User's Manual

RS-6602A

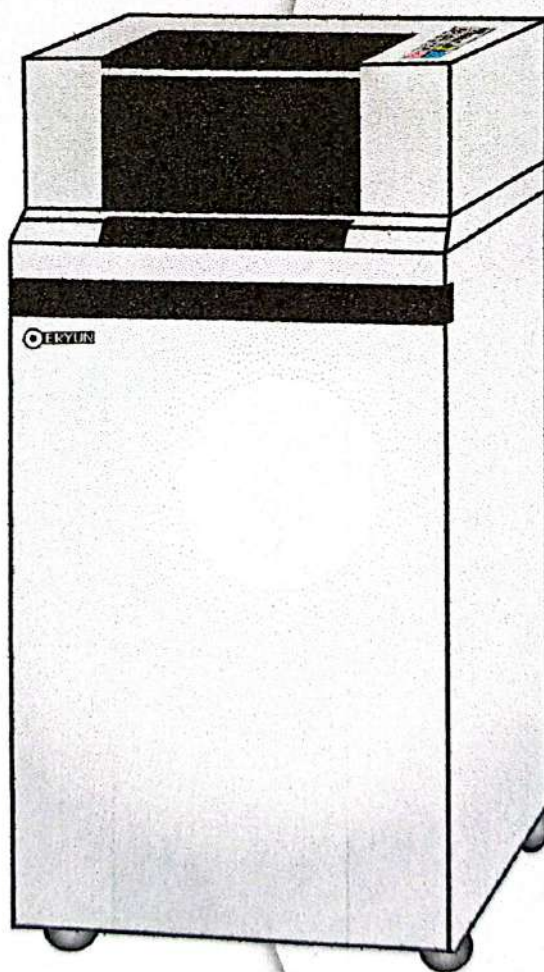

■ Table of Contents

Preparations	Main Products	2
	General Safety Instruction	3
	Installation	5
	How to Install	6
Operation	Operating Panel	7
	Operation	9
Others	Troubles and Troube shooting	11
	Product Specifications	12
	Warranty Certificate	14

Overview of the Main Products

Business Area	Description	Usage
Document Security	Paper shredder for personal or home use	Shredding general documents and OHP films
	Paper shredder for use in executive offices	
	Paper shredder for use in offices	
	High-class paper shredder for use in offices	Shredding general documents and OHP films (Mega Shredder)
	Paper shredder for use in data processing departments	Shredding general Documents, OHP films, and computer printer reports
	Multi-purpose shredder	Shredding general documents, OHP films, CD, cassette tapes, floppy disk and other wastes
	CD/ATM Slip Shredder	Shredding slips and vouchers printed in banks or ATMs
	Heavy duty Shredder	Shredding general documents, OHP films, drawings, and other wastes

Produced Items

- ▶ 70 kinds of paper shredders
- ▶ Power saving multi-taps (smart-taps)
- ▶ Weaving heat carbon fibers
- ▶ 20 kinds of medical devices
- ▶ Can compactors
- ▶ Laminator

Awarded Certificates





110V

110V: The proper voltage for this product is 110V.



Caution

There may be a risk of user injury or product damage if the relevant instruction is not followed.



Warning

There may be a risk of user injury if the relevant instruction is not followed.

■ Pertaining to Power Supply



Warning

Do not use any damaged power cords or loose outlets.


► There may be a risk of electric shock or fire.



Warning

Do not damage the power cord by forcefully bending it or placing a heavy object on it.

► There may be a risk of electric shock or fire.

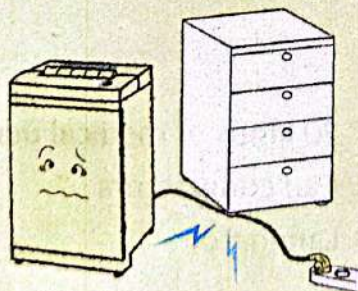

Warning


Do not forcefully pull out the power cord or touch it with a wet hand.

► There may be a risk of electric shock or fire




Warning

Do not plug several power cords in one outlet. There may be a risk of fire due to overheat.

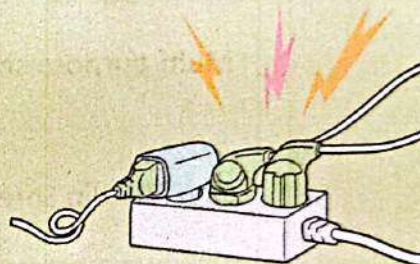

Warning


The power voltage this product should use is 110V Plug the power cord only in grounded outlets.

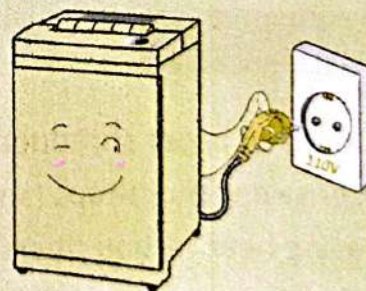

Caution

Please unplug the power cord if the product will be idle for a long period of time.

► There may be a risk of electric shock, short circuit, or fire due to

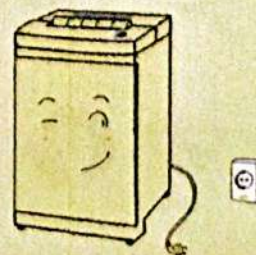

■ After Installation

Warning Do not put containers holding water in them or any metal object, on or near the device.

- There may be a risk of electric shock or fire.



Warning If the product is not grounded there is a risk of electric shock and fire. If the product is unable to be grounded please contact customer service.


- The outlet's earth terminal should be grounded. Do not connect it to gas pipes.

Warning Do not disassemble or modify product. ► We are not responsible for accidents caused by the disassembly or remodeling of product.

Warning Do not remove the cover of product. ► There is a risk of an accident.


Caution Do not place the product on an uneven surface.

- The product may fall and be damaged.

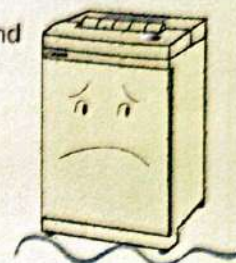

Caution Do not insert metal objects or ignitable materials into the ventilation holes of the product.

- There may be a risk of electric shock or fire.
- If foreign objects are found in the device, immediately unplug the product and contact customer service.

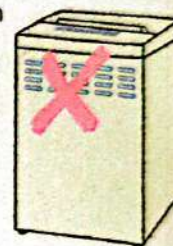


Warning If the product overheats or begins to smoke.

- There is a risk of fire or electric shock if product is used after a strange smell is identified-Please unplug the device and contact customer service.

■ Notabilia




Avoid placing volatile flammables near machine and paper. There is a risk of fire and electrical shock.

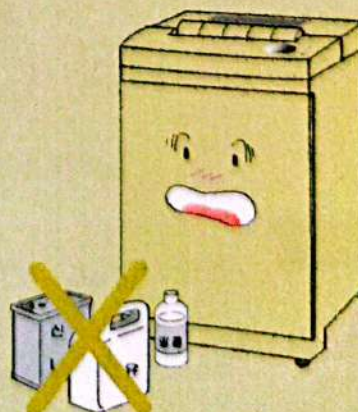

■ Name of Each Component

 Be aware of each component's name.

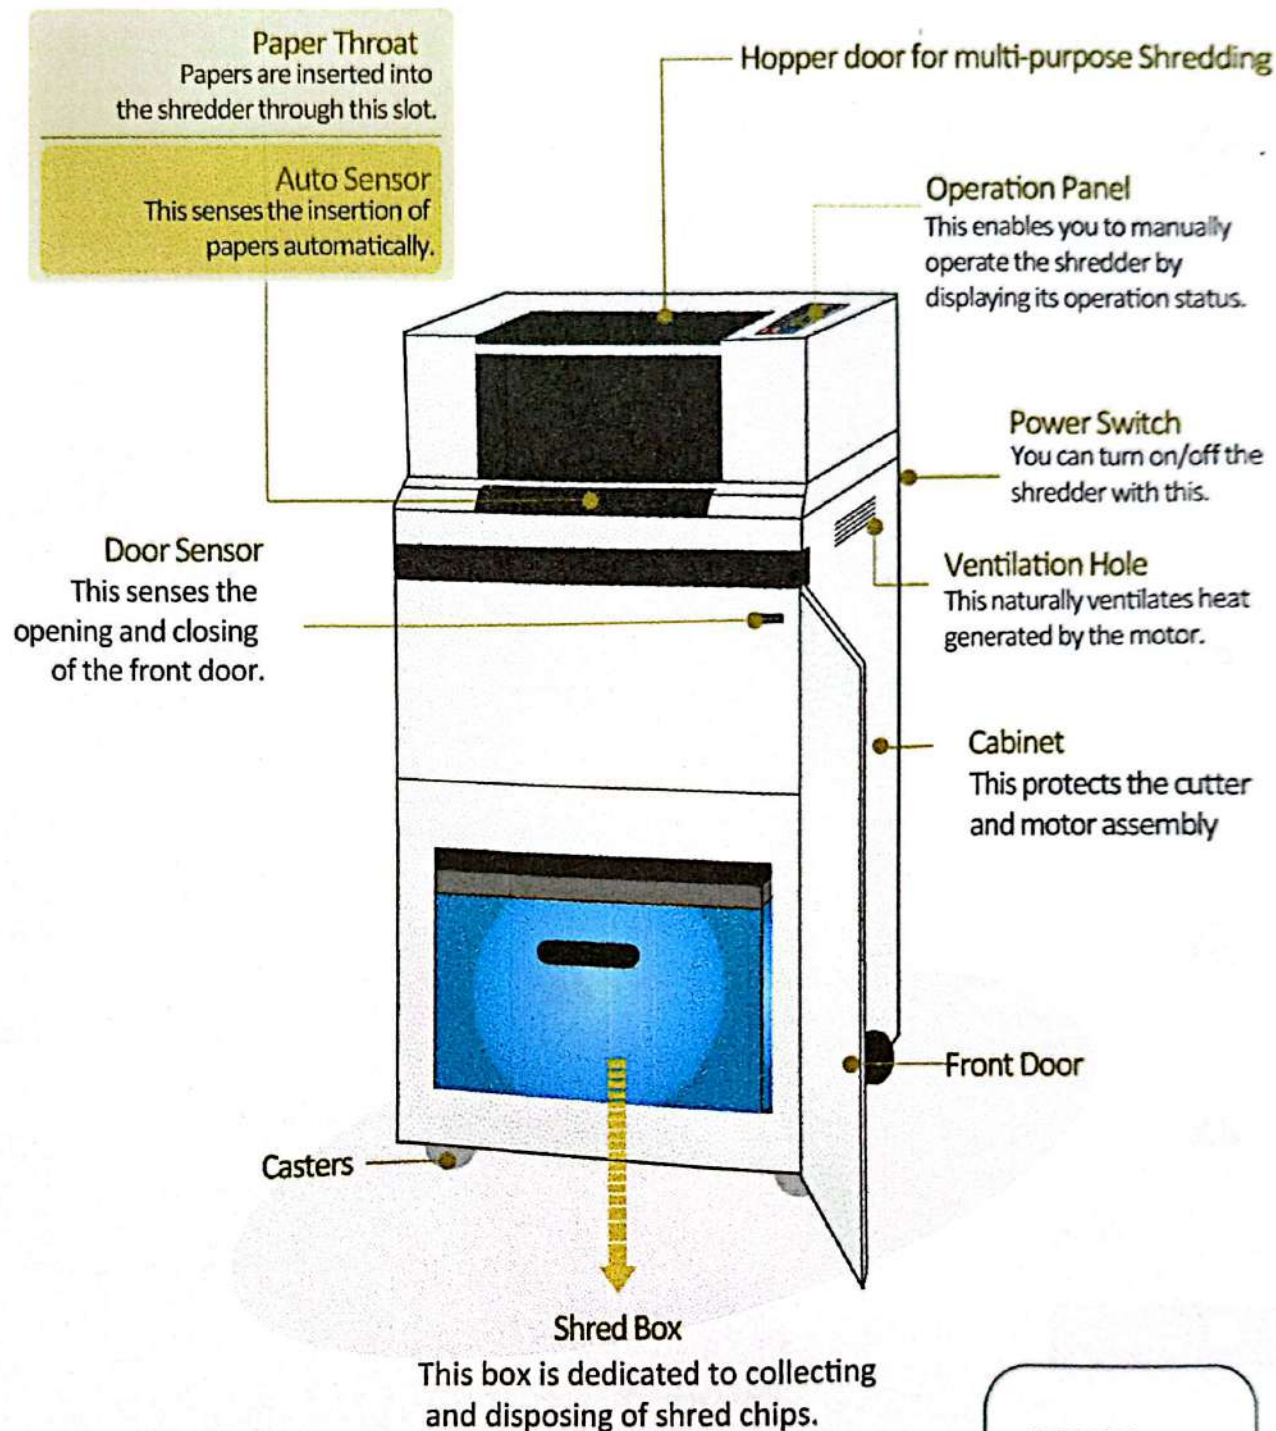


Warning



- If you touch the blade exposed under the shredder head, there may be a risk of injury.
- You can use the product more conveniently by installing the product near a fixed electrical outlet.

Be aware of how to install the product.

How to Install

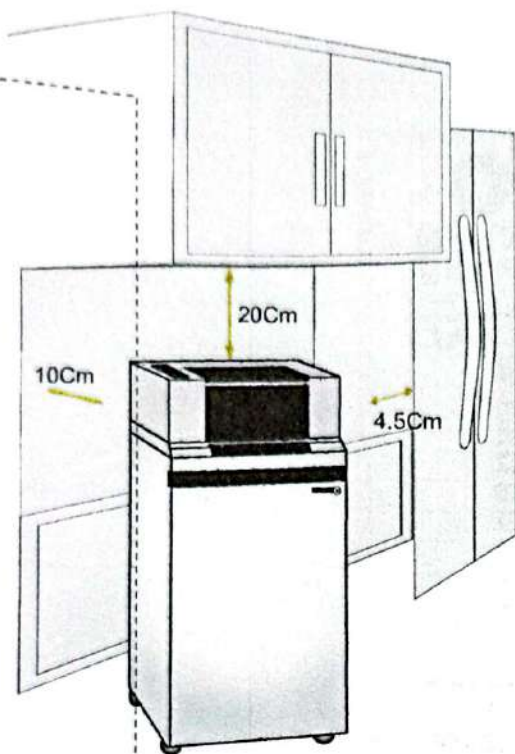

Selection of the installation location

While installing the device please leave a space between other electrical products.

- ▶ There is a risk of electrical shock and fire. Install the product on a well ventilated, flat and secure area leaving 10cm space on the back, 20cm space on the top, and over 4.5cm space on either side otherwise the product may malfunction due to poor ventilation.

Install the product on a well ventilated, flat, and secure place.

- ▶ The product may make a noise if installed on an insecure place.

Power

- ▶ Plug power cord into standard outlets.
- ▶ Make sure it is an 110V outlet.

Grounding




Warning

Be sure to ground the product for your safety. Once grounded, short circuit or electric shock can be prevented when the product is used in humid area.

In case the outlet has earth terminal

- ▶ No need to ground the product separately.

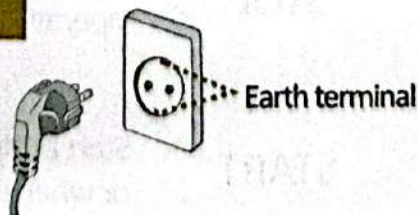




Eryun Paper Shredder

Warning! Please read this user's manual before operating this product to prevent damage to yourself or your property.

User's Manual

 RS-6602A

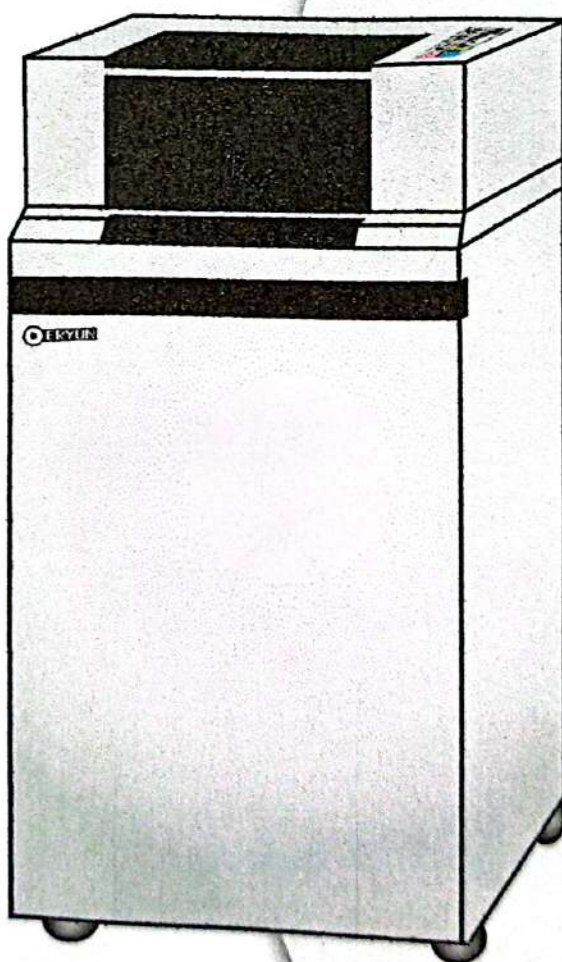

■ Table of Contents

Preparations	Main Products	2
	General Safety Instruction	3
	Installation	5
	How to Install	6
Operation	Operating Panel	7
	Operation	9
Others	Troubles and Troube shooting	11
	Product Specifications	12
	Warranty Certificate	14

Overview of the Main Products

Business Area	Description	Usage
Document Security	Paper shredder for personal or home use	Shredding general documents and OHP films
	Paper shredder for use in executive offices	
	Paper shredder for use in offices	
	High-class paper shredder for use in offices	Shredding general documents and OHP films (Mega Shredder)
	Paper shredder for use in data processing departments	Shredding general Documents, OHP films, and computer printer reports
	Multi-purpose shredder	Shredding general documents, OHP films, CD, cassette tapes, floppy disk and other wastes
	CD/ATM Slip Shredder	Shredding slips and vouchers printed in banks or ATMs
	Heavy duty Shredder	Shredding general documents, OHP films, drawings, and other wastes

Produced Items

- ▶ 70 kinds of paper shredders
- ▶ Power saving multi-taps (smart-taps)
- ▶ Weaving heat carbon fibers
- ▶ 20 kinds of medical devices
- ▶ Can compactors
- ▶ Laminator

Awarded Certificates





110V

110V: The proper voltage for this product is 110V.



Caution

There may be a risk of user injury or product damage if the relevant instruction is not followed.



Warning

There may be a risk of user injury if the relevant instruction is not followed.

■ Pertaining to Power Supply



Warning

Do not use any damaged power cords or loose outlets.

 
► There may be a risk of electric shock or fire.



Warning

Do not damage the power cord by forcefully bending it or placing a heavy object on it.


► There may be a risk of electric shock or fire.

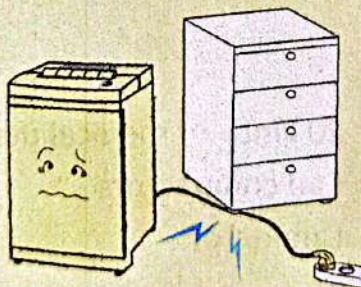

Warning


Do not forcefully pull out the power cord or touch it with a wet hand.

 ► There may be a risk of electric shock or fire

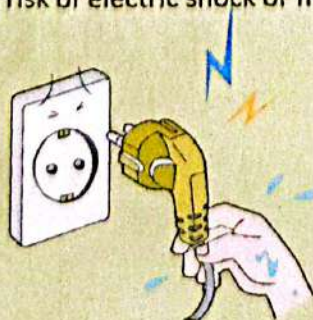


Warning

 Do not plug several power cords in one outlet. There may be a risk of fire due to overheat.

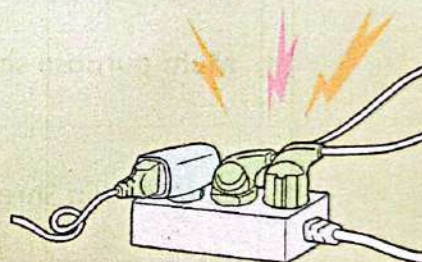

Warning

 
The power voltage this product should use is 110V Plug the power cord only in grounded outlets.

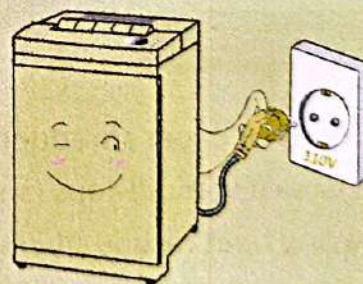

Caution

Please unplug the power cord if the product will be idle for a long period of time.

 ► There may be a risk of electric shock, short circuit, or fire due to

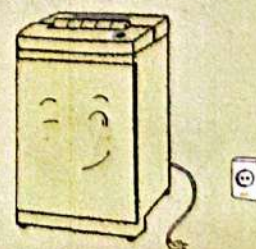



Do not put containers holding water in them or any metal object, on or near the device.

- There may be a risk of electric shock or fire.



If the product is not grounded there is a risk of electric shock and fire.
If the product is unable to be grounded please contact customer service.

- The outlet's earth terminal should be grounded. Do not connect it to gas pipes.



Do not disassemble or modify product.

- We are not responsible for accidents caused by the disassembly or remodeling of product.



 
Do not remove the cover of product.

- There is a risk of an accident.




Do not place the product on an uneven surface.

- The product may fall and be damaged.

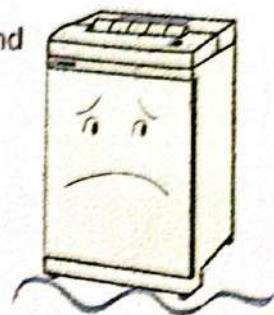

Do not insert metal objects or ignitable materials into the ventilation holes of the product.

 - There may be a risk of electric shock or fire.
- If foreign objects are found in the device, immediately unplug the product and contact customer service.

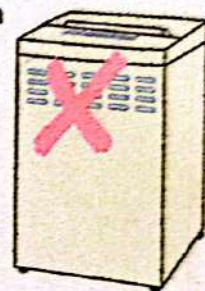


If the product overheats or begins to smoke.

- There is a risk of fire or electric shock if product is used after a strange smell is identified-Please unplug the device and contact customer service.

Notabilia





 Avoid placing volatile flammables near machine and paper.
There is a risk of fire and electrical shock.

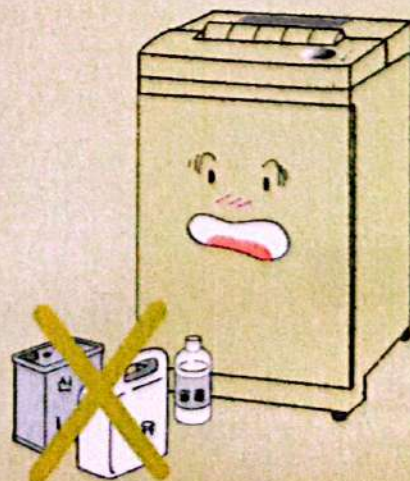

■ Name of Each Component

  
Be aware of each component's name.

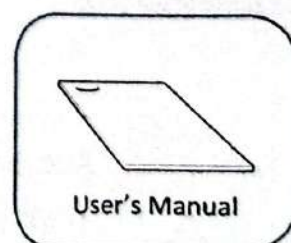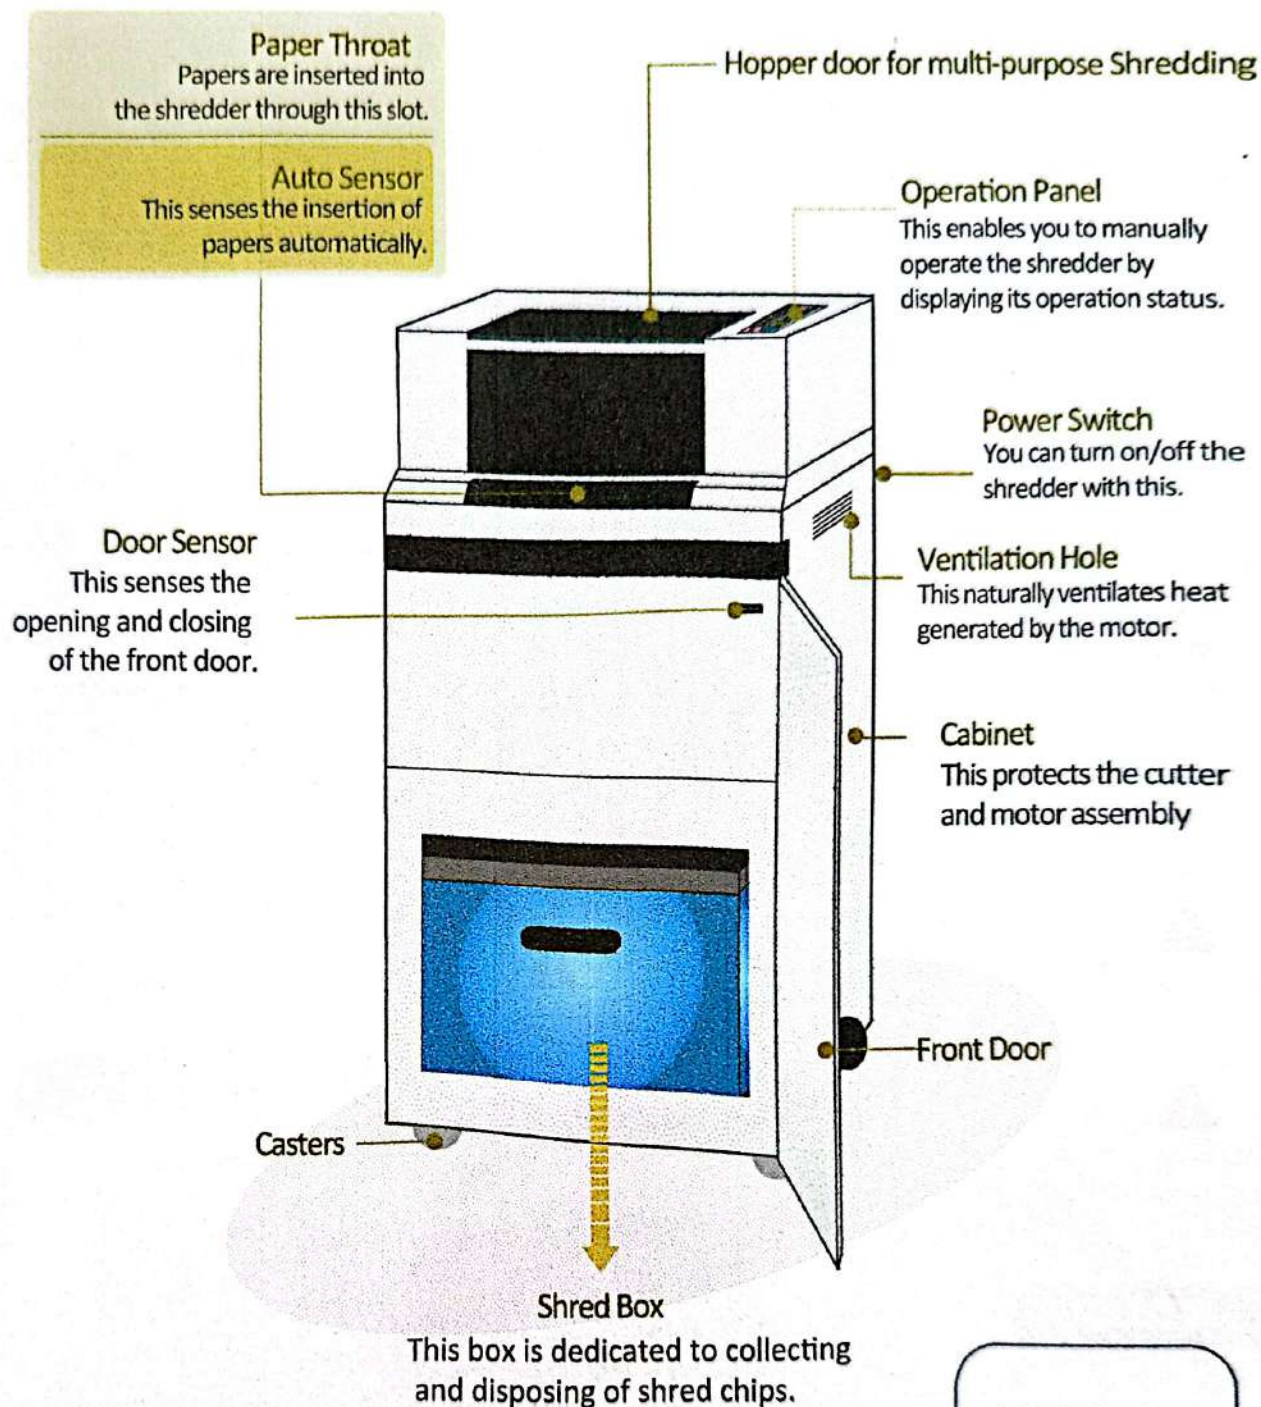

Warning



 - If you touch the blade exposed under the shredder head, there may be a risk of injury.
- You can use the product more conveniently by installing the product near a fixed electrical outlet.

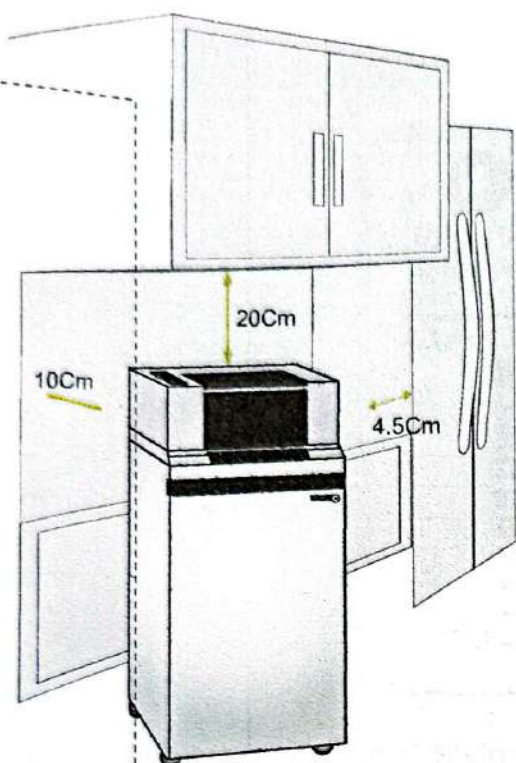

Selection of the installation location

While installing the device please leave a space between other electrical products.

- ▶ There is a risk of electrical shock and fire. Install the product on a well ventilated, flat and secure area leaving 10cm space on the back, 20cm space on the top, and over 4.5cm space on either side otherwise the product may malfunction due to poor ventilation.

Install the product on a well ventilated, flat, and secure place.

- ▶ The product may make a noise if installed on an insecure place.

Power

- ▶ Plug power cord into standard outlets.
- ▶ Make sure it is an 110V outlet.

Grounding

 


Warning


Be sure to ground the product for your safety. Once grounded, short circuit or electric shock can be prevented when the product is used in humid area.

In case the outlet has earth terminal

- ▶ No need to ground the product separately.

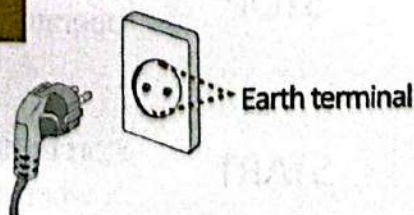

 Operation panel, icon names and functions

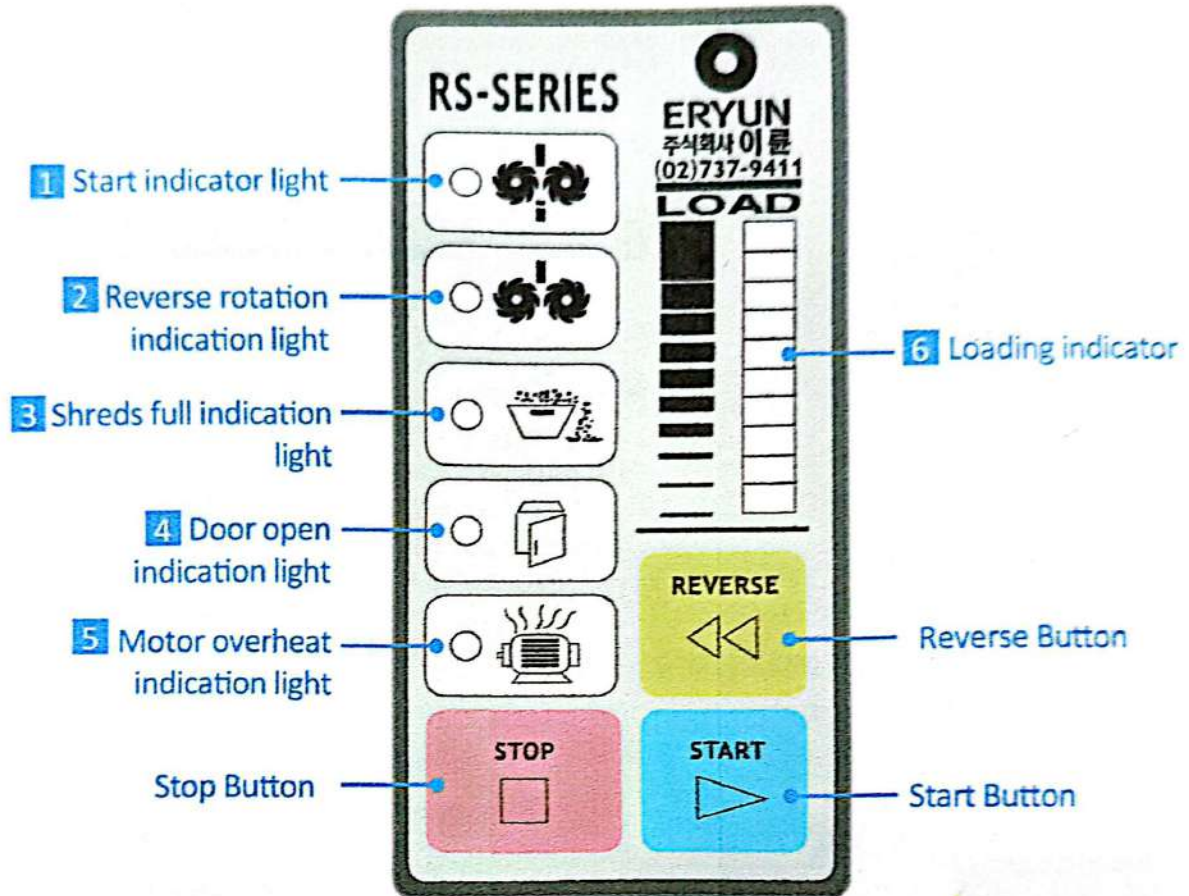

Operation Buttons

	REVERSE	Reverse rotation button: used when taking out shreds or papers being shredded or controlling the amount of paper to be shredded.
	STOP	Stop button: used when stopping the shredder being operated automatically or manually.
	START	Start button: used when starting the shredder manually or when it's operating to shred some materials at the hopper

Functional description of the status indication icons on the operation panel

1 Paper insertion detecting sensor indication light

Once papers are inserted into the throat, the light turns on and the shredder automatically starts. The blinking light is a normal operation to protect the sensor.

2 Reverse rotation indication light

This light automatically turns on when a paper overload is detected during shredding operation or when the reverse rotation switch is pressed.

3 Shreds full indication light

The light turns on when the shred box is full. The shredder operates normally after cleaning the shred box.

4 Door open indication light

This function is for user's safety. The light turns on when the shredder's door or the top cover is opened. The shredder only operates when both of them are tightly closed.


5 Motor overheat indication light

The light turns on when shredding operation continues for 30 minutes to prevent the motor overheat and the decrease of its efficiency.

The shredder can resume operation by initializing it using the stop button.

6 Load indication light

Depending on the amount of papers currently being shredded, different position of the light turns on. When paper load reaches the highest point, the motor stops and makes reverse rotations automatically.

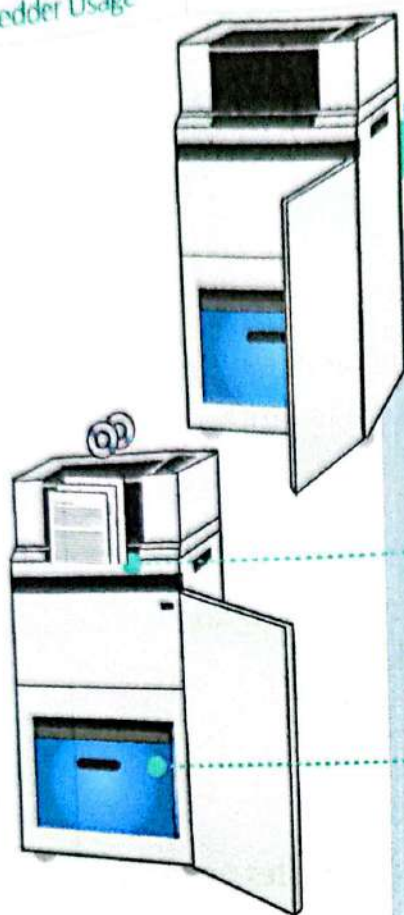

Basic shredder operation

1 Power on/off

Turn on the power switch located in the back side of the machine.

2 Inserting papers

insert papers to be shredded into the front proper throat.

3 Completing Shredding

When finished the shredder will automatically stop. You can check the shreds in the shred box.



Caution

- Plug the power cord in the outlet with rated voltage and current.
- Check the voltage of the outlet since this product only uses 110V.

Detail steps to operate the shredder.


1. Turn on the power switch in the back side of the machine.
2. Check the operation panel if the shredder is in stand-by mode.
3. Insert paper to be shredded into the throat.
4. Without pressing the start button, the insertion of papers can be detected by the optical sensor and shredding work starts automatically.
After the completion of shredding work, the shredder stops operation and goes into stand-by mode.
5. The reverse rotation of the motor when there is too much amount of inserted papers to be shredded is a normal operation for safe shredding work and the protection of the motor.
6. Once shredding is completed, the shredder stops operation automatically and goes into stand-by mode.

Use the product
as follows.

Be well aware of how to use the shredder.

How to use the shredder

Problems to be simply taken care of by the user

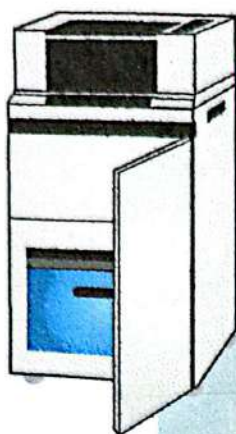

1 Door Opening

Check that the shred box is properly placed.
Close shredder door.


2 Paper Jamming

If paper jam occurs or the reverse indicator light turns on. Press the reverse button for 2 to 3 seconds. When paper comes out resume shredding.



3 Overheat

When the "over heat" light comes on, stop operating the device and let cool for 30 minutes and resume shredding.

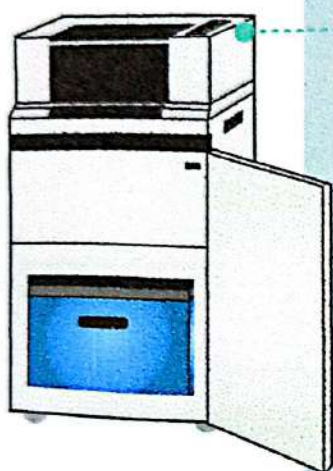

Caution

- If the motor automatically stops or starts reverse rotations due to an overload or overheating, reduce the amount of paper and resume shredding.
- The device automatically stops if the motor idles.
- If the shredder becomes full an alarm will go off and the product will stop working.
- If the shredder door is ajar the safety unit will prevent the shredder from operating. So make sure the door is shut
- Always unplug the shredder before cleaning.
- If above problems are not fixed with the recommended solution please contact our customer service center (Tel: +82-1577-8411).

Model Name	RS-6600A
Throat Width	230(mm)
Shred Width	2X18(mm)
Maximum Sheets	18 to 20 sheets(A4 PPC) at a time
Size	500X460X980(mm)
Weight	79kg
Power Supply	AC 110V,60Hz
Motor	1/2HP(Geared Motor)
Power Consumption	400W
Shred Box Capacity	70ℓ
Main Features	<ul style="list-style-type: none"> . Auto sensing of paper insertion . Heat sensing to protect the motor . Auto door unlock protection . Reverse rotation at the time of overload . Auto stop at the time of idle rotation for over one minute . Auto sensing of the pileup of shreds . Auto blocking of overcurrent by applying the breaker switch . 10 times extension of the life of the auto sensor . Application of the patented reinforced cutter system

※ Note: The above specifications can be changed without prior notice to improve the functions of the product.

Model Name	RS-6602A
Throat Width	230(mm)
Shred Width	2X18(mm)
Maximum Sheets	20 to 22 sheets(A4 PPC) at a time
Size	500X460X980(mm)
Weight	70kg
Power Supply	AC 110V,60Hz
Motor	1/2HP(Geared Motor)
Power Consumption	400W
Shred Box Capacity	70ℓ
Main Features	<ul style="list-style-type: none"> . Auto sensing of paper insertion . Heat sensing to protect the motor . Auto door unlock protection . Reverse rotation at the time of overload . Auto stop at the time of idle rotation for over one minute . Auto sensing of the pileup of shreds . Auto blocking of overcurrent by applying the breaker switch . 10 times extension of the life of the auto sensor . Application of the patented reinforced cutter system

※ Note: The above specifications can be changed without prior notice to improve the functions of the product.

Troubleshooting

Is the product plugged in?

▼ YES

NO Plug into wall socket.
▶ Turn power switch on.

Does the light indicate stand-by mode?

▼ YES


NO Turn unit off and then switch back on.
▶ If the product still does not work please contact customer support.

Please refer to the functions of the operation panel and status display window in this user manual.

When the shred's full lamp in the operation panel is turned on



Empty shred box and dust the auto sensing plate.

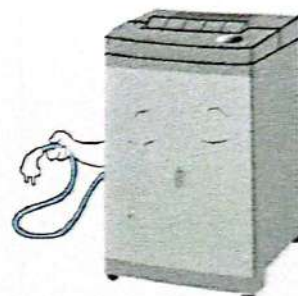

When the shredding function doesn't work

Check out for the operation panel's signal.

Check for the signal



Refer to the user's manual



Problem solved

▶ Check if any lamps on the operation panel's display window are abnormally turned on.

▶ Please refer to the user's manual.

If the auto or manual function doesn't work even if the lamps are turned on, turn the power on after turning it off for 2 minutes..

Warranty Certificate

Product Name	Paper Shredder	Model Name	
Product Serial No.		Customer Name	
Purchase Date		Customer Address	

About the Warranty Service:

This product has passed quality assurance.

If the product malfunctions within the warranty period we will provide the following services.

Free Repair Service

- Free repair for all malfunctions occurring under proper operation within one year of purchase.

Paid Repair Service

- The following actions will void the warranty
 - If the product has been repaired, disassembled or remolded by an unauthorized technician.
 - Product malfunction due to improper handling, intentionally or accidentally.
 - Damaged cause by natural disasters including but not limited to lightning, fire, flood, etc.
- Repair fees will vary according to malfunction.





Main Office/Factory

1285-1 Doochang Wonsam Cheoin-gu Yongin-si Gyeonggi-do
Tel: +82-31-333-9411, Fax: +82-31-322-9410

Headquarters Division

4 Naesu-dong Jongro-gu Seoul
Tel: +82-2-737-9411, Fax: +82-2-737-9410

Customer Service Center

+82-2-737-9411

We're always ready to answer your questions and
consult with you quickly if you let us know your
product's model, serial number, and malfunction
status as well as your phone number.
Customer Consulting Department



<http://www.eryun.com>